



 
LED Light

Powered by

 


## Pair the Remote Control to the HD STB



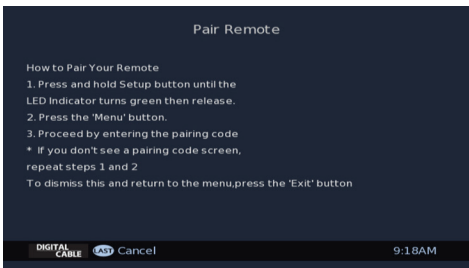



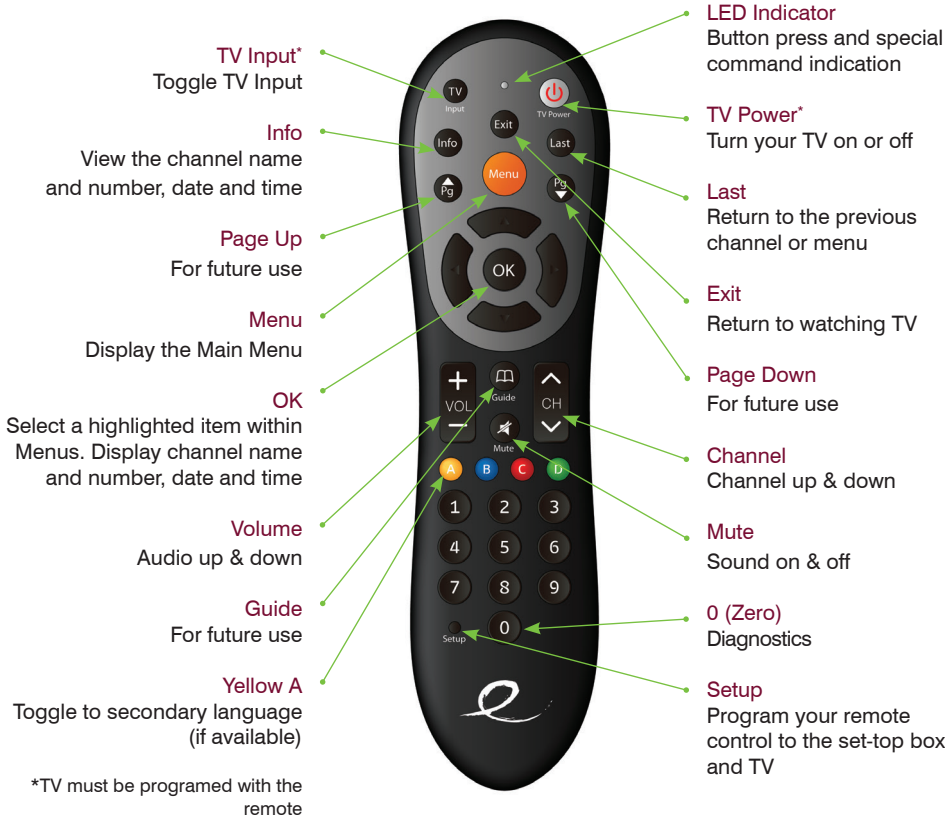





 
- 1 Press the Menu button.
- 2 Select General Setup and then select Pair Remote.
- 3 Press OK to Pair.
- 4 Press and hold Setup button until the LED Indicator turns green.
- 5 Press the Menu button.

 


## REMOTE FUNCTIONS



## LED BLINK PATTERNS

LED Behavior	HD uDTA Status	Troubleshoot
Red   Green   Red   Green    	Device is looking for signal The HD uDTA is in Hunt Mode	Check RF connections
Green   Green   Red   	Device in Pending Initialization Mode (has QAM lock, acquired CAT and waiting for an activation)	Check device ID, send refresh
Green   Green   Green   	Device in Code Download Mode (code download pending)	Wait for device to complete download
Solid Green 	Device is in normal operations, decoding video	No action required
Blinking Green Light  	Device in Trouble Mode	Power cycle & check connections to verify device is not working

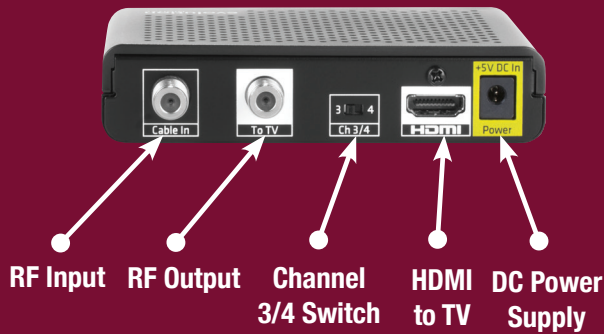

## ROVI DTA GUIDE FUNCTIONS



### On Now/Next Banner

The On Now/On Next Banner appears automatically when you change channels and gives you instant access to what's currently playing on a particular channel. From here, discover the next program coming up, find what's airing on other channels, or dive into an expanded programming schedule by moving onto the TV Listings Grid.



### TV Listings Grid

There are 3 ways to enter the TV Listings Grid:

- Press **GUIDE**
- Press **INFO** from the On Now/On Next Banner
- Press **LAST** from the Program Information Screen

### Info Screen

Press the **Info** button 3 times on the remote while watching TV to access the full Info Screen.

Press the **Exit** to return to live TV.

## SETTINGS MENU

Press the **Menu** button on your remote control to access the main menu and update your HD Digital Adapter settings. Press the arrow buttons to navigate the menu. Press **Exit** at anytime to return to live TV.



### Parental Controls

**Setting up your PIN** – Press **Menu** on your remote, select Parental Control and press OK for initial PIN setup.

**Lock Channels** – Press **Menu** on your remote, select Parental Control and use the Right and Up/Down arrows to select Channels. Use the OK button to lock/unlock each desired channel.

**Lock by Rating** – Press **Menu** on your remote, select Parental Control and use the Right and Up/Down arrows to select Movie Ratings or TV Ratings. Use the OK button to lock/unlock each desired rating.

**Hide Titles** – Press **Menu** on your remote, select Parental Control and use the Right and Up/Down arrows to select Hide Titles. Use the OK button to hide Adult or Adult and TV-MA.

**Language Options** – Press **Menu** on your remote, select General Setup and select Language. Use the OK button to select desired language (if available).



### HDMI Inputs

**HDMI Inputs** – Press **Menu** on your remote, select HDMI Setup, press Right to select a new display setting. Press **Exit** to return to watching TV.

**Closed Captioning** – Press **Menu** on your remote, highlight Closed Captioning and press Right 2x to make your selection.



### TV Ratings



### Closed Captioning